


Premium+ Double Decker


Assembly Instructions I

Item #01518

Tool Required - Regular Screwdriver

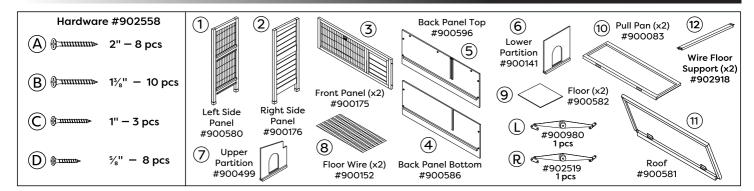


Step 1

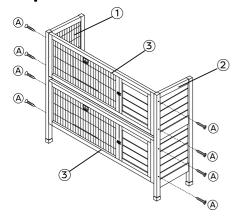

Position Left Side (1), Right Side (2), and the Front Panels (3) as pictured. Attach using 8–2" screws (A).


Step 2

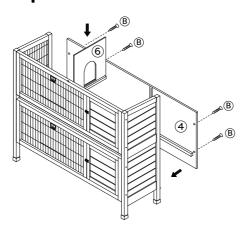

Attach Back Panel Bottom (4) using 4–13/8" screws (B). Insert Lower partition (6).


Support (12), the Floor $\mbox{} \mbox{} \mbo$

Step 4

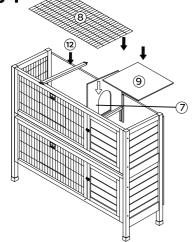

Insert the Upper Partition (7). Insert the Wire Floor Support (12), the Floor Wire (8), and the Floor (9).


Step 5

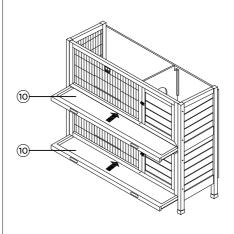

Slide Pull Pans (10) into the lower and middle sections as shown.

Step 6

Insert the Wire Floor

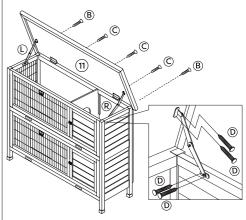

Attach Roof (11) using 3–1" screws (C) and $2-1\frac{3}{8}$ " screws (B). Attach the Locking Hinges (L)(R) to the roof and side panels using $8-\frac{5}{8}$ " screws (D).

ware 👺 cares

We care about the carbon pawprint we leave as a company and are committed to using recycled and recyclable material in the manufacturing of our packaging and pet products.

Care Tip

To protect the wood on your hutch you need to re-apply the protective stain finish at least 1x each year. Use a safe and non-toxic water based stain (available at your local paint or hardware center).

Keep hutch in a safe area away from high winds and extreme temperatures.

#30001518