


Universal Playpen

Assembly Instructions

Item #02072

Step 1 Unfold the universal playpen and connect the two ends using the 30" Connector Rod.

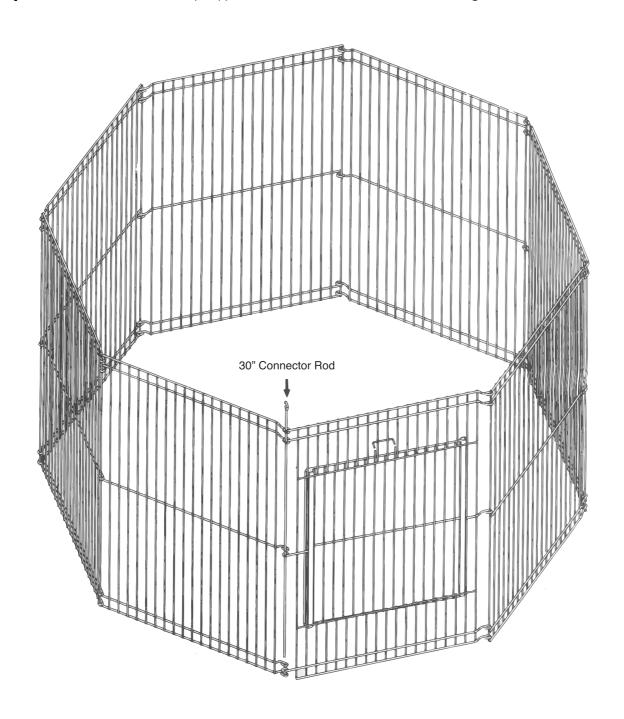



We care about the carbon pawprint we leave as a company and are committed to using recycled and recyclable material in the manufacturing of our packaging and pet products.

Care Tip

Play Pens are not intended as a pet home. Supervision during use is encouraged for your pets safety. Also remember to remove harnesses and collars to prevent accidents.

#30002072