


Chew Proof Small Animal High Rise

Assembly Instructions Item #00338

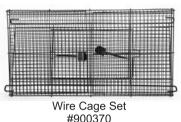


Lower Shelf

w/Opening

#900329




Upper Shelf Short Ramp #900096 #900640








Step 1

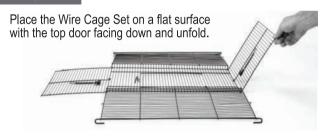

Step 2

Connect the panels together using the "J" shaped wire hooks. These hooks are specially designed to create a woven connection joint. Connect the hooks on each of the 4 sides.




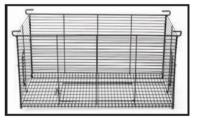

Step 3

Place the assembled Wire Cage Set on top of your 10 gallon aquarium (tank must be purchased separately). Make sure that the wire corners fit securely over the tank. Secure the wire cage to the frame of your aquarium using the spring clip fasteners on each side of the cage.



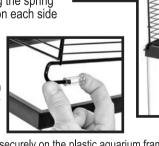


wire does not fit securely on the plastic aquarium frame, simply attach the 4 plastic tube covers (as shown).

Step 4

Open the Cage door on the top. Locate the shelf with the opening and attach this to the first wire from the bottom using the wire hooks on the shelf. Attach the long ramp to the cage shelf at the opening.



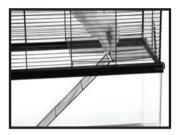

Step 5

Attach the square shelf to the 12th wire from the cage bottom using the wire hooks on the shelf. Attach the short ramp to this shelf.





Step 6

Open the Cage door on the top. Locate the shelf with the opening and attach this to the first wire from the bottom using the wire hooks on the shelf. Attach the long ramp to the cage shelf at the opening.







If you have any questions or concerns about this product contact our customer service department at 1-800-295-2243 Mon-Fri 8:00 - 4:00 MST or email us at hello@warepet.com

Revised: 11-20-2019