



Metal Base  
#900600




Wire Latches x2  
#900602



Wire Cage Set  
#900601


## Step 1

Remove the Wire Cage Set and lay on a flat surface with the doorway facing upward.

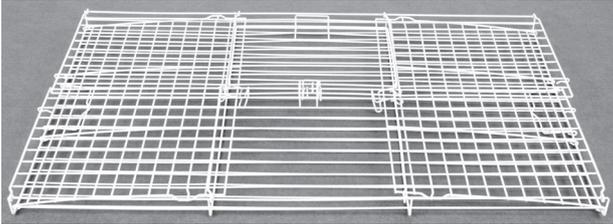




## Step 2

Unfold the front, back, and side panels.

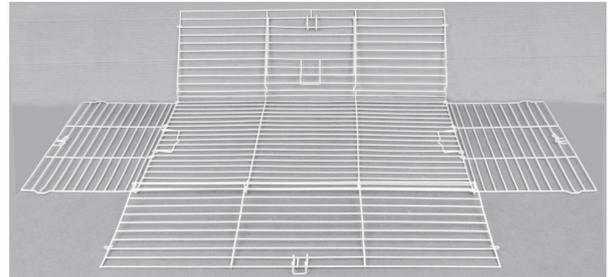

## Step 3



Lock the two side panels onto the back and front panels by snapping the wire hook onto the wire frame.

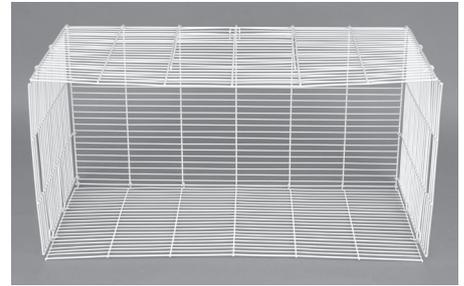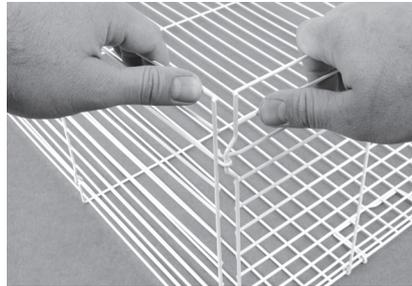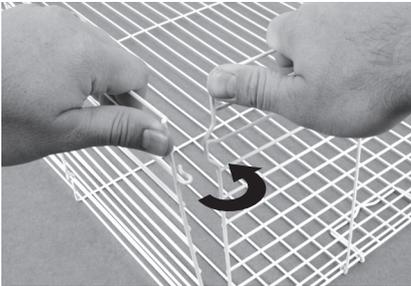

Note: If the wire hooks have become bent in shipping, carefully pry them open until they fit on the wire frame.

## Step 4

Turn the Wire Cage Set upright and place it on top of the Metal Tray. Insert the Wire Latches on the 6th wire from the bottom. Lock the Wire Cage Set to the Metal Tray using the Wire Latches.

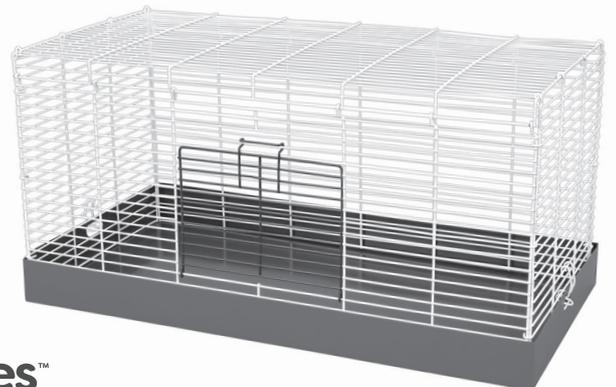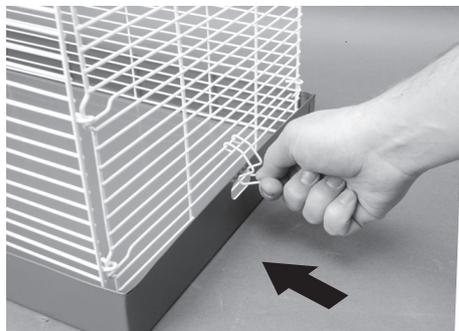

**ware**  **cares**<sup>™</sup>

We care about the carbon pawprint we leave as a company and are committed to using recycled and recyclable material in the manufacturing of our packaging and pet products.

If you have any questions or concerns about this product contact our customer service department at 1-800-295-2243 Mon-Fri 8:00 - 4:00 MST or email us at [hello@warepet.com](mailto:hello@warepet.com)

#30000661

Ware Mfg., Inc. claims copyright protection under U.S. and International Copyright Law in the attached sculptural work and in the content of this packaging. Copyright ©2019 Ware Mfg., Inc. All rights reserved.