
medium premium+ a-frame doghouse

Assembly Instructions

ltem #01706

Tool Required - Regular Screwdriver

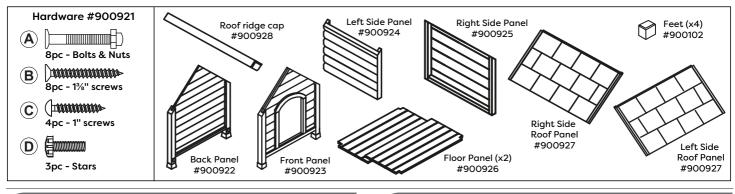

Step 2

assembled doghouse. The corners of the Floor Panels are notched to fit the outside


corners.

Insert the two piece


Floor Panel into the

Step 1 Connect the Front Panel and the Back Panel to the Left Side Panel and Right Side Panel using 8 - Bolts & Nuts (A).

pet products

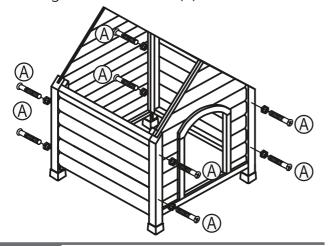

Step 3 Attach the Rigth Side Roof Panel and the Left Side Roof Panel to the assembled doghouse using 8 - 1³/₄" screws (B).

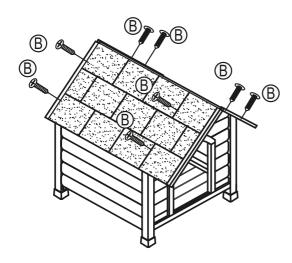

ware 🗳 cares

We care about the carbon pawprint we leave as a company and are committed to using recycled and recyclable material in the manufacturing of our packaging and pet products. To protect the wood on your premium+ doghouse you need to re-apply the protective stain finish at least 1x each year. Use a safe and non-toxic water based stain (available at your local paint or hardware center). Keep doghouse in a safe area away from high winds and extreme temperatures.

If you have any questions or concerns about this product contact our customer service department at 1-800-295-2243 Mon-Fri 8:00 - 4:00 MST or email us at hello@warepet.com

#30001706

Ware Mfg, Inc. claims copyright protection under U.S. and International Copyright Law in the attached sculptural work and in the content of this packaging. Copyright ©2020 Ware Mfg, Inc. All rights reserved.

Step 4 Place the Roof Ridge Cap onto the Shingle Roof Panels and secure using 4 - 1" screws (C). Attach 3 - Star shaped bolts (D) onto the dog door frame in the threaded holes.

