ware®
pet products

ferret condo

assembly instructions Item #16039

Wire Cage #902039

Cage Base #902040

4 Casters
(2 locking)
#902041

24" x 24" Fabric Shelf
#902044

Fabric Hammock
#902042

Fabric Tunnel
#902045

Hammock/Tunnel
Combo #902043

Step 1

Turn cage base upside down to attach casters one by one. Insert the caster into the hole, be careful to press in tight. Repeat process with remaining 3 casters.

TIP: Casters should be inserted in the bottom of the hole.

Step 2

Put base to the side and place wire on floor. Carefully unfold panels. Lift front panel and 1 side panel. Start with lowest "J" hook and attach to the side panel alternating back and forth with the hooks to create a weave connection. Repeat this step with the back panel and the other side panel until all panels have a woven connection.

TIP: Always start by attaching bottom hook first and move up to attach others.

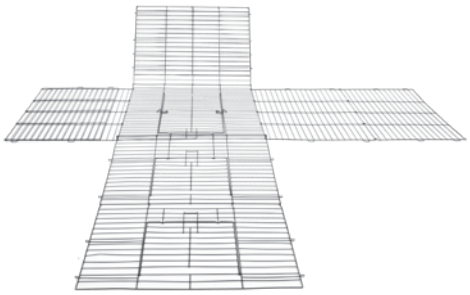

Step 3

Turn cage right side up and place on top of the base. Secure wire cage to cage base by pressing bottom wire under 2 clips located on each of the 4 sides of the base. Once wire cage is secured, gently pull on top of cage to make sure wire and base are properly connected on all sides.

Step 4

Loosen all cloth tabs around the entire perimeter of the 24" x 24" fabric shelf. Open bottom front door of cage and place cloth inside. Starting at the front of the cage, align 1 cloth tab with the 18th bar up from the bottom of the cage. Thread the fabric over and under the 18th wire, then push cloth upwards to make a secure connection. Complete this process with all remaining cloth tabs around entire cage.

TIP: The floor can be tightened by adjusting the cloth tabs.

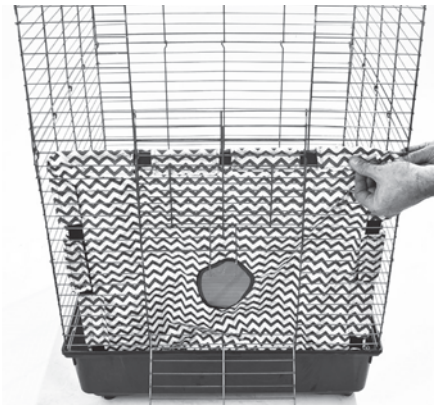

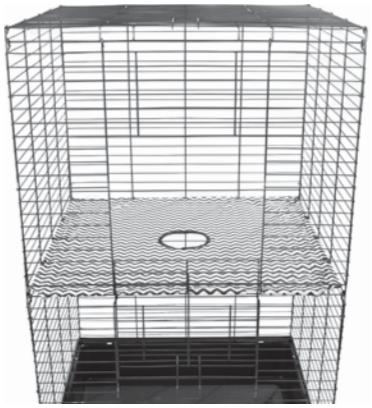

Step 5

Attach the fabric hammock to the right and left side of the cage. Connect the black, plastic clips to the 8th bar up from the bottom wire. Hammock should sit directly under the 24” x 24” fabric shelf.

TIP: To properly connect the hammock make certain the clips are attached to the left and right of the 2 vertical cage bars.

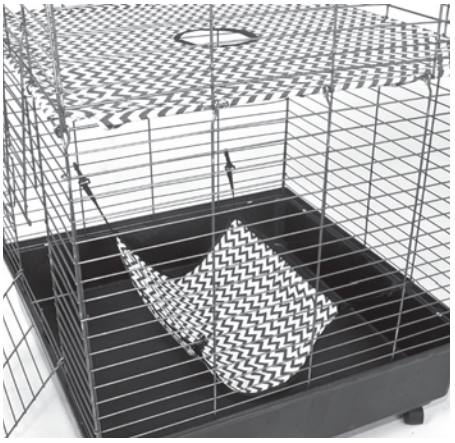

Step 6

Insert the fabric tunnel through the round opening in the center of the 24” x 24” fabric shelf.

TIP: Gently pull down on the tunnel to ensure it is connected securely to the floor.

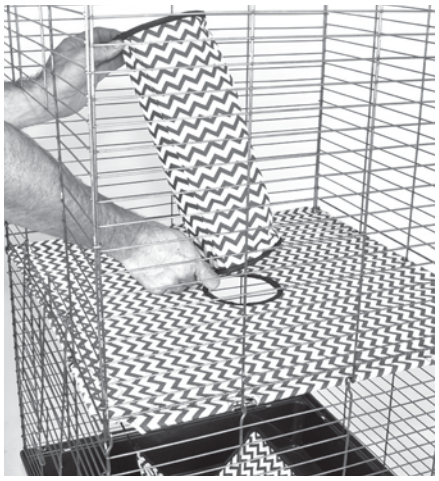

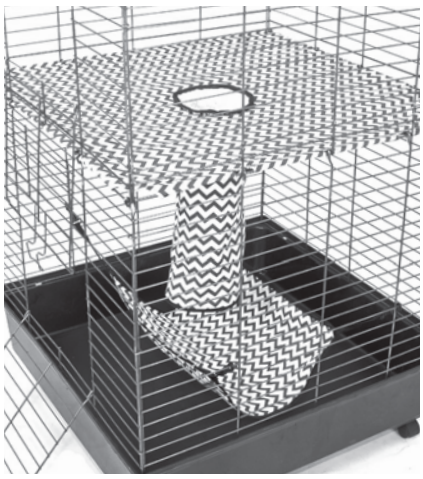

Step 7

To connect the hammock/tunnel combo to the cage, first open the top door. Attach the black, plastic clips onto the 2nd bar down from the top at the intersection of the center vertical wires. Repeat this process to connect the remaining 2 clips to the back of the cage.

TIP: Placement of hammocks and tunnel is at your discretion. Feel free to try out different configurations and create the best habitat for your pet.

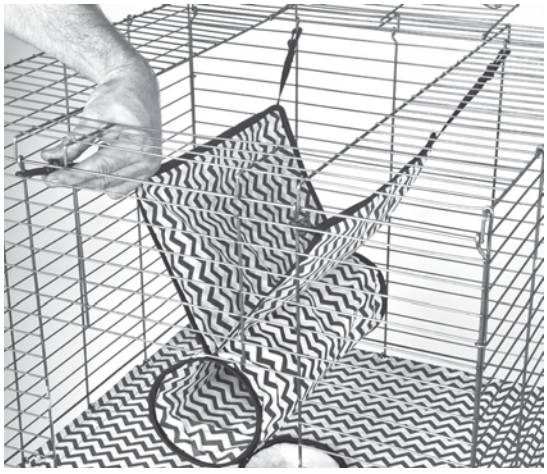

Step 8

Close the front doors and lock by connecting the top wire door tab under the horizontal cage wire. Close the top door by connecting the wire door tab under the horizontal cage wire. Secure each side of the top door by locking the small side latches over the horizontal top wire.

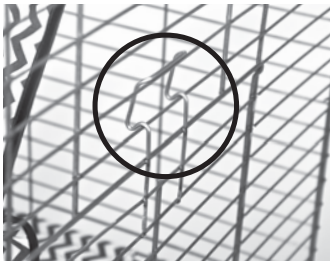

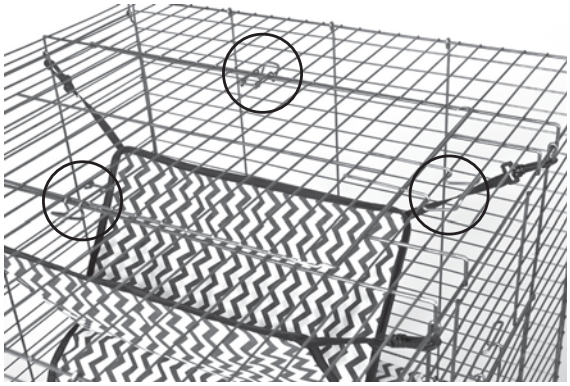

CAGE CLEANING TIP:

Wash cage with mild soap and water and thoroughly dry or use approved cage cleaners. Fabric shelf, hammocks, and tunnel can be machine washed in cold water on the gentle cycle. Tumble dry on low heat.

If you have any questions or concerns about this product contact our customer service department at 1-800-295-2243 Mon-Fri 8:00 – 4:00 MST or email us at hello@warepet.com

#30016039

Ware Mfg., Inc. claims copyright protection under U.S. and International Copyright Law in the attached sculptural work and in the content of this packaging. Copyright ©2022 Ware Mfg., Inc. All rights reserved.